
JENE-PC-LONCARD

PRODUCT DATA SHEET





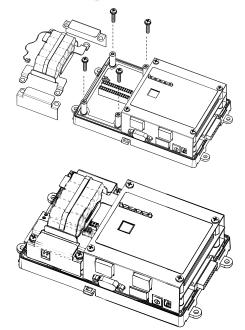



www.lynxspring.com 1210 NE Windsor Drive, Lee's Summit, MO 64086 877-649-5969 | sales@lynxspring.com



Overview

The JENEsys[®] JENE-PC-LONCARD communication module is a LonWorks[®] FTT-10A adaptor with a 2-position removable screw-terminal connector plug option card for a JENE-PC series controller. The JENE-PC-LONCARD can be installed in either Option Slot 1 or 2 on a JENE-PC series controller.

The LEDs are visible on the top of the JENE-PC-LONCARD (cover must be removed from the JENE-PC series controller). The two LEDs described are as follows:

- **RX (green)**: Receive, indicates that another LonWorks[®] device is transmitting a message.
- **TX (yellow?)**: Transmit, indicates that the JENE-PC series controller is transmitting a message on the LonWorks[®] Trunk.

Technical Data

COMMUNICATION	WIRING
 LonWorks® FTT-10A, 78k baud 	 Connect the LonWorks® FTT-10 communication wiring to the 2-position connector of the JENE-PC-LONCARD. Note that polarity is not a factor in FTT-10 wiring.

Ordering Information

MODEL #	DESCRIPTION
JENE-PC-LONCARD	JENE-PC Series LonWorks® Communication Module - Made in the USA

